

Operating the TV

TV Setup

This menu allows you to change the general settings for digital TV. The following options are available:

Lock – Allows you to prevent access to certain features of the TV.


Note: The default password is 0000.

Audio Language – Allows you to set primary and secondary audio languages.

Subtitle Language – Allows you to set the subtitle language.

Time Zone – Allows you to change the time zone.

CI Information – Allows you to access the Common Interface Card and its status.

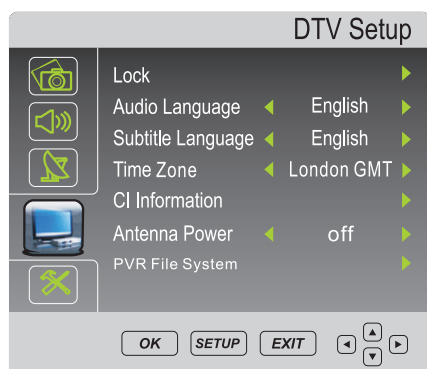

Antenna Power – Allows you to turn on/off the antenna power.

PVR File System – Allows you to setup record file system

Lock

Allows you to prevent access to certain features of the TV. When the system Lock is ON, the password must be entered to make changes to the locked features.


Lock System – Allows you to lock the system.

Block Programme – Allows you to block certain programmes and channels.

Parental Guidance – Allows you to restrict programmes to suit the viewer age. Only programmes suitable for the selected age will be accessible. Select the age of the viewer from the following options:

- Off
- 4
- 5
- 6
- 7
- 8
- 9
- 10
- 11
- 12
- 13
- 14
- 15
- 16
- 17
- 18

Note: This feature may not be supported by all broadcasters.

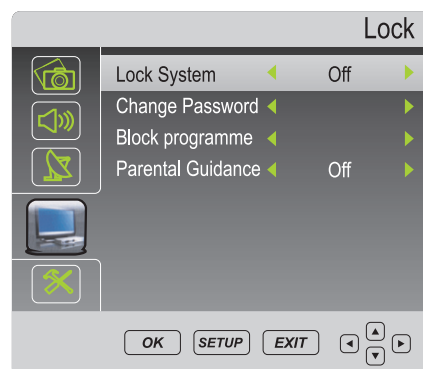

Change Password – Allows you to change the password:

Note: The default password is 0000.

1. Enter the new password.
2. Re-enter the new password to confirm it. The password is now changed.

