

SCHEDULED SERVICING PLAN

| Thousands of miles | 30 | 60 | 90 | 120 | 150 |
|--|----|----|-----|-----|-----|
| Thousands of kilometres | 48 | 96 | 144 | 192 | 240 |
| Months | 24 | 48 | 72 | 96 | 120 |
| Check battery charge status and recharge if necessary | ● | ● | ● | ● | ● |
| Check tyre conditions/wear and adjust pressure, if required | ● | ● | ● | ● | ● |
| Check operation of lighting system (headlights, direction indicators, hazard warning lights, luggage compartment, passenger compartment, glove compartment, instrument panel warning lights, etc.) | ● | ● | ● | ● | ● |
| Check operation of windscreen wiper/washer system and adjust jets, if necessary | ● | ● | ● | ● | ● |
| Check the position/wear of the windscreen/rear window wiper blades | ● | ● | ● | ● | ● |
| Check cleanliness of bonnet and luggage compartment locks, as well as cleanliness and lubrication of linkages | ● | ● | ● | ● | ● |
| Visually inspect condition of: exterior bodywork, underbody protection, pipes and hoses (exhaust, fuel system, brakes), rubber elements (boots, sleeves, bushes, etc.) | ● | ● | ● | ● | ● |
| Check condition and wear of front disc brake pads and operation of pad wear indicator | ● | ● | ● | ● | ● |
| Check condition and wear of rear disc brake pads and operation of pad wear indicator (for versions/markets where provided) | ● | ● | ● | ● | ● |
| Check and, if necessary, top up fluid levels (engine coolant, hydraulic clutch/brakes, windscreen washer, battery, etc.) | ● | ● | ● | ● | ● |



| Thousands of miles | 30 | 60 | 90 | 120 | 150 |
|---|----|----|-----|-----|-----|
| Thousands of kilometres | 48 | 96 | 144 | 192 | 240 |
| Months | 24 | 48 | 72 | 96 | 120 |
| Visual check of accessory drive belt(s) (versions without automatic tensioner) (110 (°)- 130 - 150 - 180 MultiJet versions) | | ● | | | ● |
| Check tension of accessory drive belt (versions without automatic tensioner) (Λ) | ● | | | ● | |
| Check tension of accessory drive belt (versions without automatic tensioner) (115 MultiJet versions) (°) (Λ) | ● | | ● | | ● |
| Check condition of toothed timing drive belt (110 (°)- 130 - 150 MultiJet versions) | | ● | | | |
| Check condition of toothed timing drive belt (115 MultiJet versions) (°)) | ● | ● | ● | ● | ● |
| Check handbrake lever travel and adjust, if required | ● | ● | ● | ● | ● |
| Check exhaust emissions/smokiness | ● | ● | ● | ● | ● |
| Check engine control system operation (through diagnosis socket) | ● | ● | ● | ● | ● |
| Check cleanliness of sliding side door lower guides for versions with S.S.D. (or every 6 months) | ● | ● | ● | ● | ● |
| Replace the fuel filter cartridge (diesel versions) | ● | ● | ● | ● | ● |
| Replace accessory drive belt(s) | | | ● | | |
| Replace the accessory drive belt(s) (115 MultiJet versions) (°)) | | ● | | ● | |

(°)Version for specific markets

(Λ) When the engine oil is changed for the first time, check the tension of the accessory drive belt

| Thousands of miles | 30 | 60 | 90 | 120 | 150 |
|--|----|----|-----|-----|-----|
| Thousands of kilometres | 48 | 96 | 144 | 192 | 240 |
| Months | 24 | 48 | 72 | 96 | 120 |
| Replace toothed timing drive belt (*) (110 (°)- 130 - 150 MultiJet versions) | | | | ● | |
| Replace toothed timing drive belt (*) (115 MultiJet versions)(°)) | | | ● | | |
| Replace air cleaner cartridge (***) | ● | ● | ● | ● | ● |
| Change engine oil and replace oil filter (**) (#) | | | | | |
| Change brake fluid (or every 24 months) | | ● | | ● | |
| Replace pollen filter (or every 24 months) | ● | ● | ● | ● | ● |

(*) Irrespective of the mileage, the timing drive belt must be changed every 4 years for heavy-duty use (cold climates, town use, long periods of idling) or at least every 5 years. **I**

(°)Version for specific markets

(***) If the vehicle is equipped with a specific air cleaner for dusty areas: -every 20,000 km check and wash cleaner; every 40,000 km replace cleaner.

(**) The actual interval for changing the oil and replacing the engine oil filter depends on the car usage conditions and is signalled by the warning light or message (if present) on the instrument panel (see "Warning lights and messages" paragraph) and must never exceed 24 months.

(#) If the vehicle is driven mainly in towns, change engine oil and oil filter every 12 months.

