



Legend.

R1	Fuel heater relay (Diesel)
R2	Transmission system relay-AT
R3	Engine control (EC)relay
R4	Fuel pump (FP) relay
R5	Engine coolant blower motor relay 1
R6	AC compressor clutch relay
R7	Engine coolant blower motor relay2
R8	Headlamp washer pump relay
R9	Fog lamp relay
R10	Horn relay
R11	Heater blower relay
R12	Headlamp high beam relay
F1	(40A) Fascia fuse box/relay plate, multifunction control module
F2	(70A) Fascia fuse box/relay plate
F3	(30A) Engine coolant blower motor
F4	(40A/50A) Engine coolant blower motor
F5	(60A) Power steering
F6	(50A) Anti-lock brake system (ABS)
F7	(20A) Ignition switch

F8	(20A) Fuel filter heater, engine management
F9	(10A) Automatic transmission (AT)
F10	(15A) Engine management
F11	(20A) Engine management, fuel pump (FP) (1,28V)
F12	(7,5A) Engine management
F13	(15A) Fuel pump(except 1,28V), fuel shut-off solenoid (1,9D)
F14	
F15	(7,5A) Automatic transmission(AT),engine management
F16	(20A) Head lamp washers
F17	(15A) Front fog lamps
F18	(7,5A) Engine management
F19	(7,5A) Air conditioning (AC)
F20	(15A) Horn
F21	(10A) LH headlamp- high beam
F22	(30A) Heater/air-conditioning (AC)
F23	(10A) RH headlamp – high beam
F24	(60A) Glow plugs
F25	(7,5A) Automatic transmission (AT)