



External Shower Point No. 6088

User Instructions


The External Shower Point is connected directly to an internal water supply; it provides an outside source of hot or cold mixed water.

Safety:

- Read these instructions before using the equipment.
- Use only in accordance with the instructions.
- Do not connect any other accessory to the Shower point panel.
- Do not connect shower head and hose assembly to any other accessory point.
- Supervise children and the elderly to prevent scalding from hot water.
- Never attempt to modify the equipment or use it for purposes for which it was not intended.

Routine Maintenance:

- The External Shower Point should only require regular cleaning, ensure that the rubber seal is in place in the lid, when the lid is closed it keeps the internal valve seals free from the ingress of dirt and grime.
- Keep the mixer dial spigot clean and free from damage to prevent any water leaks when in use.
- Check the hose regularly and replace it if is worn or damaged.

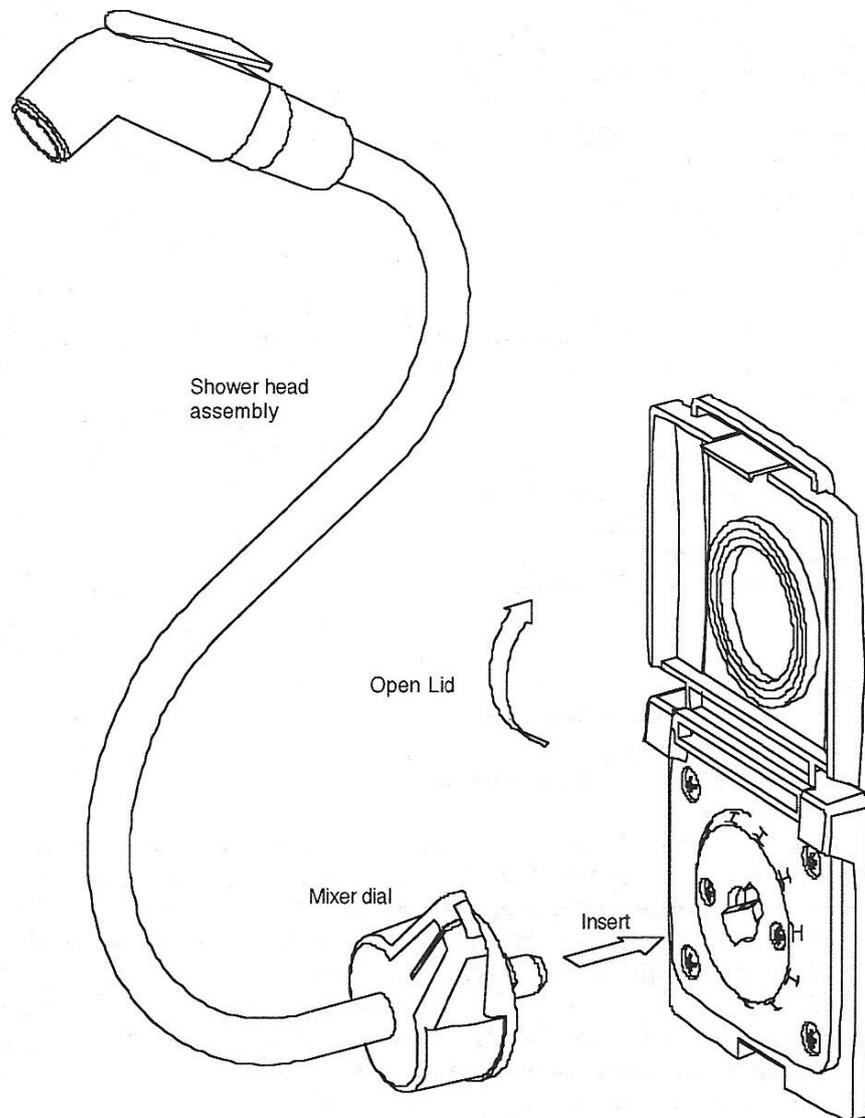

Diag. 1.

Connection:

- Open the shower point panel lid fully to engage detent. (See diag.1).
- Insert the shower head assembly mixer spigot into the shower point panel and turn counter clockwise to engage. (See diag.1).
- Depress the shower head lever to activate.
- Rotate mixer dial to desired water temperature. (See diag. 2).
- Release showerhead lever to shut off the shower.

Disconnection:

- When disconnecting the showerhead assembly, turn the mixer dial to the off position by rotating the mixer dial clockwise to the first stop. (See diag. 2).
- Depress the showerhead lever to empty the hose.
- Further depress the mixer dial and turn clockwise.
- Remove the showerhead assembly from the shower point panel.
- Close lid fully.

Note: To prevent accidental damage to the equipment, always ensure that the clip on the lid is fully engaged.

Spare Parts:


The following spare parts are available from Bullfinch (Gas Equipment) Limited.

- Shower head No. SP 6088 E
- Shower head assembly No. SP 6088 D

Drain Down Procedure:

During cold weather (or when the caravan is not to be used for long periods), it is highly recommended that the Shower Point be drained of water.

Follow your caravan/motorhome manufacturers procedure for draining the water system. Once this has been carried out and the Shower Point is isolated from the main caravan water supply, fit the shower hose to the Shower Point, rotate the mixer control to the maximum hot position (fully counter clockwise). Hold the shower head below the level of the Shower Point and depress the lever on the shower head. Allow any water to drain away and still keeping the shower head lever depressed rotate the mixer control clockwise, allowing any water to drain away. Repeat this operation until there is no more water issuing from the showerhead. Keeping the shower head lever depressed remove the hose from the Shower Point and release the lever. The Shower Point should now be empty of any water.

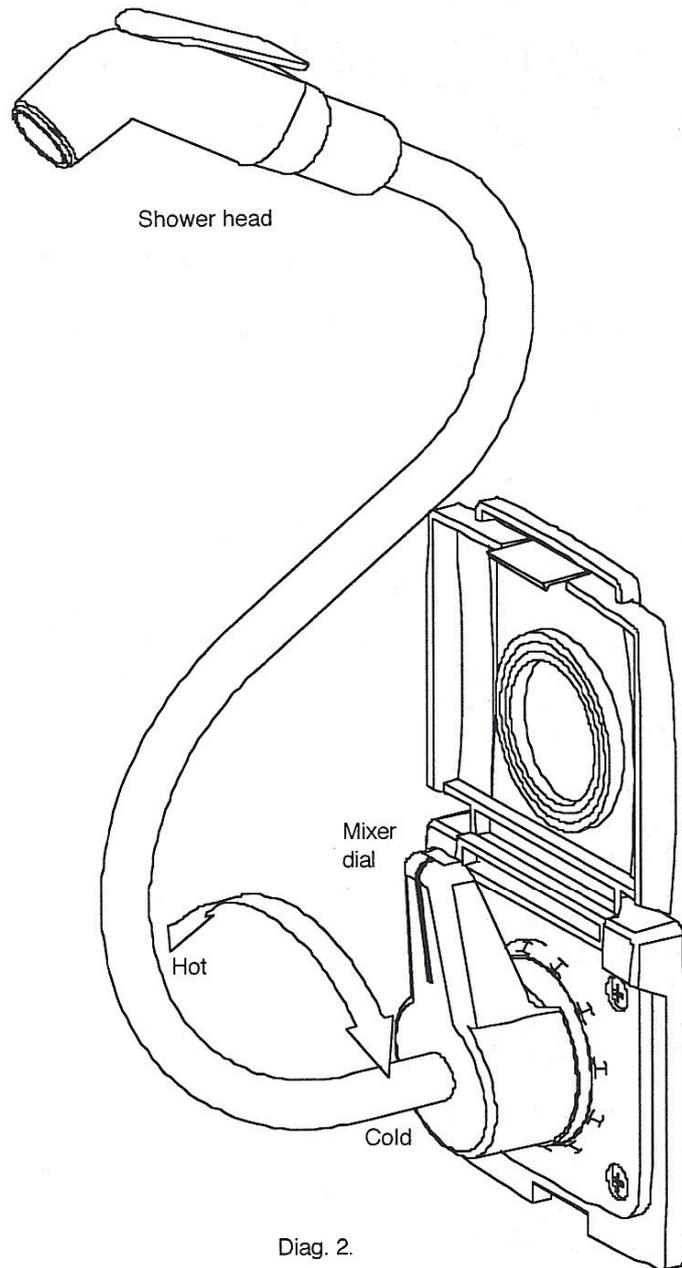

Bullfinch (Gas Equipment) Limited.
Diadem Works, Kings Road, Tyseley, Birmingham. B11 2AJ England.
Tel: +44 (0)121 706 6301 Fax: +44 (0)121 707 0995
e-mail: sales@bullfinch-gas.co.uk
Web: www.bullfinch-gas.co.uk