


Fitting a DC-DC Charger to EC600/800 Systems (Swift Motorhomes only)

Note

Isolation relay must be added, to ensure the EC600/800 split charge relay does not override the DC-DC charger.

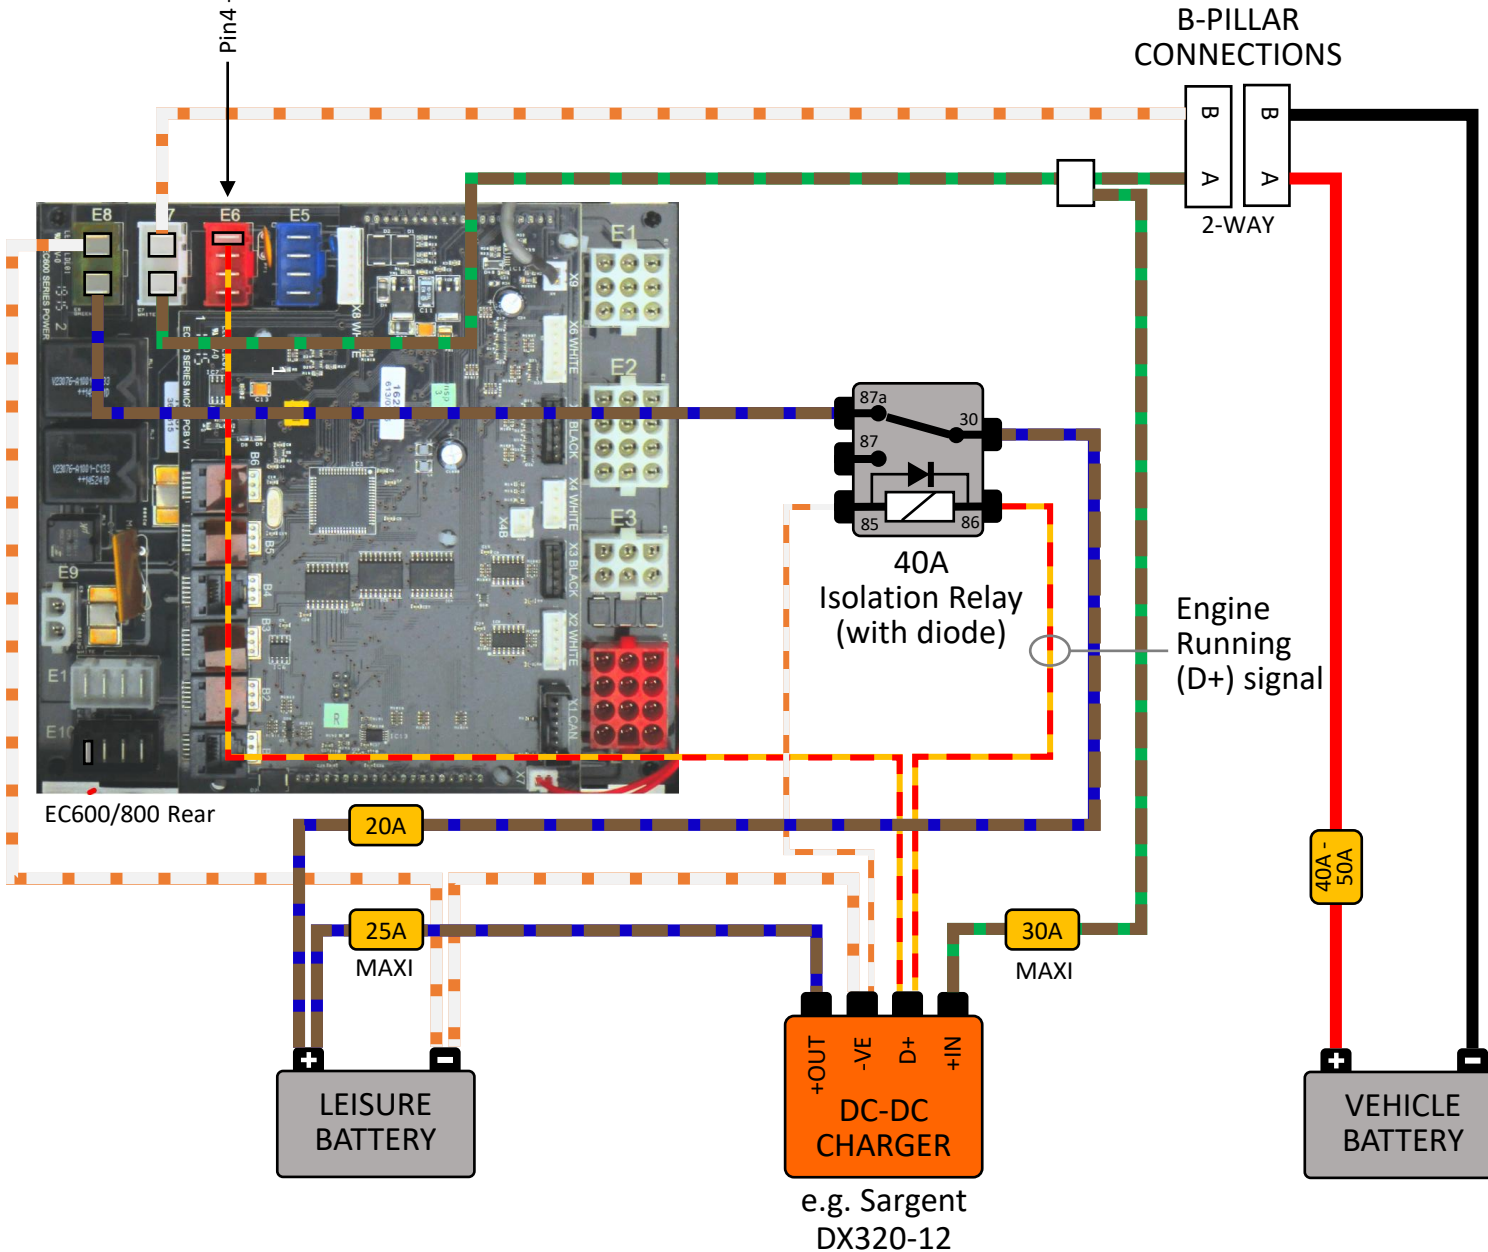

B-PILLAR CONNECTIONS



A = Battery Positive
B = Battery Negative

View from rear of motorhome connector

SARGENT

Issue: 01
Date: 25/07/22