



## Fitting a DC-DC Charger to EC600/800 Systems (Swift Motorhomes only)

Note

Isolation relay must be added, to ensure the EC600/800 split charge relay does not override the DC-DC charger.

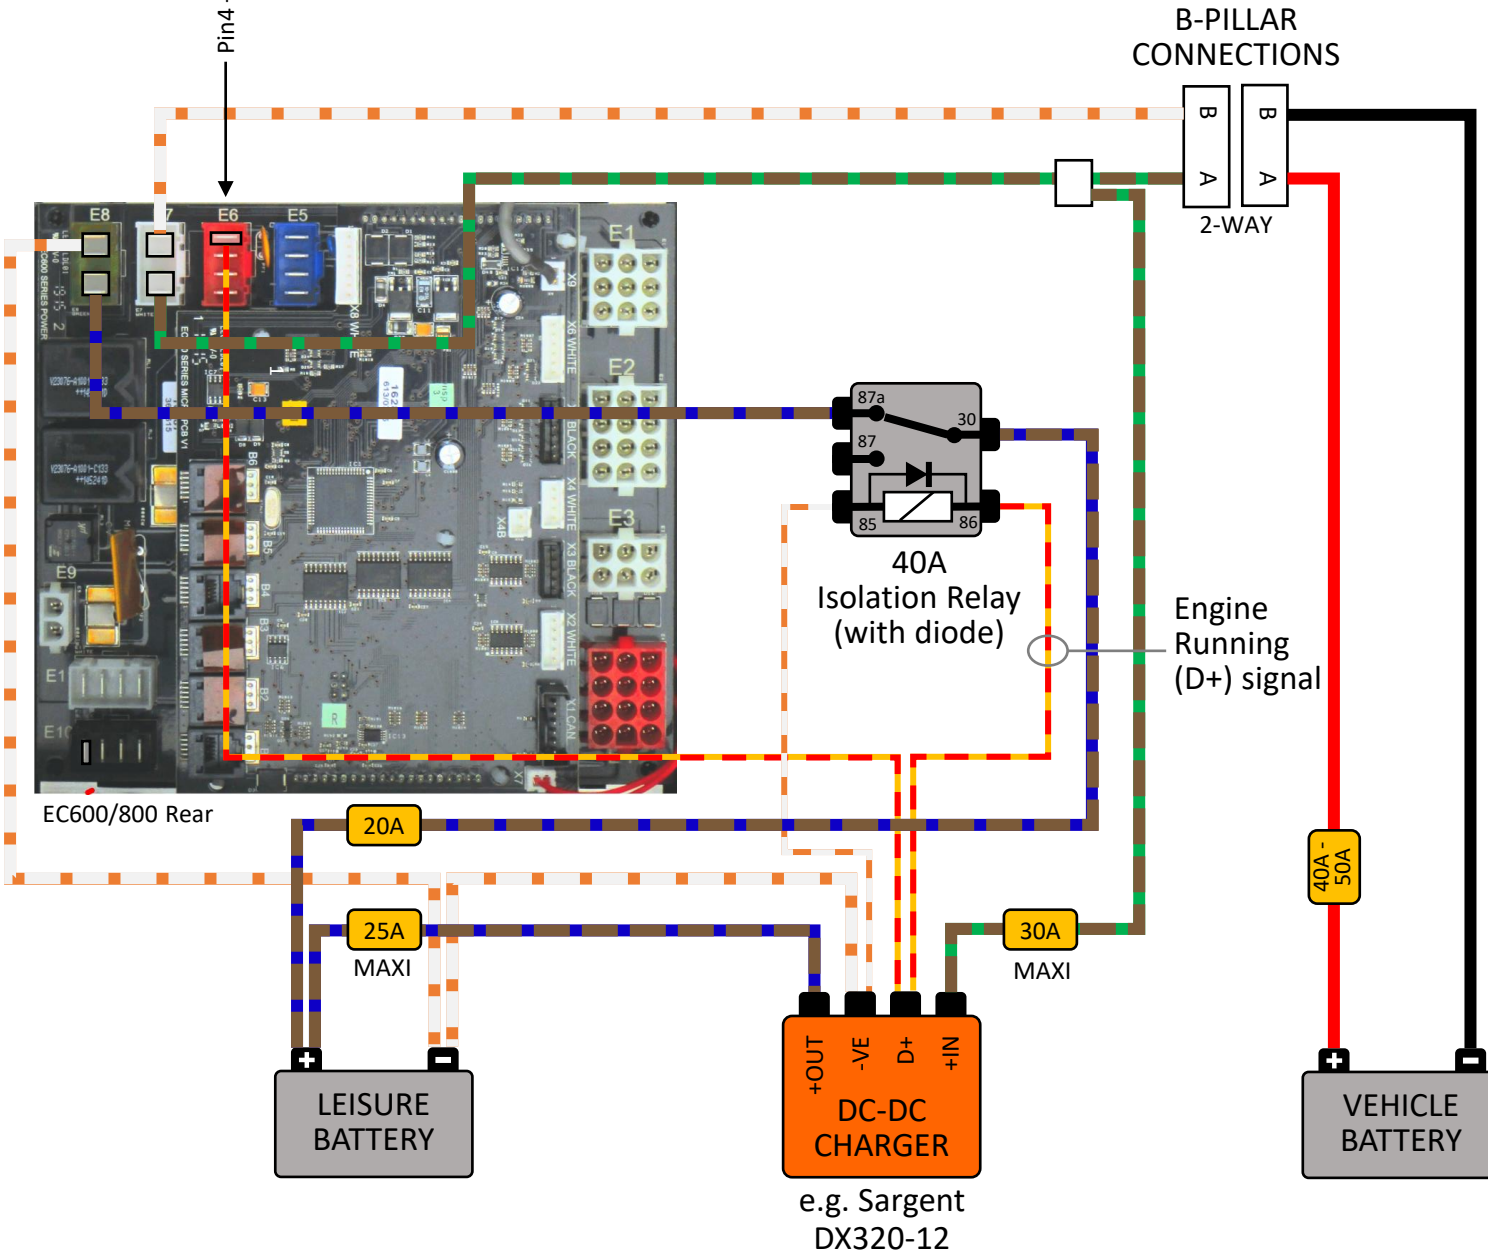

## B-PILLAR CONNECTIONS



A = Battery Positive  
B = Battery Negative

View from rear of motorhome connector

A diagram showing a 2x2 grid. The top row contains two empty cells. The bottom row contains two cells, the left one labeled 'A' and the right one labeled 'B'.

A = Battery Positive  
B = Battery Negative

View from rear of motorhome connector

**SARGENT**  
Issue: 01  
Date: 25/07/22

Issue: 01  
Date: 25/07/22