


Ford Transit Anti Pick Lock Installation Guide




1. Click drivers door latch back into door shut position
2. Remove screws circled using a torx T25/30/35 & Philips screwdriver.

3. Remove door handle trim first by pulling the handle out and pulling on the piece of trim

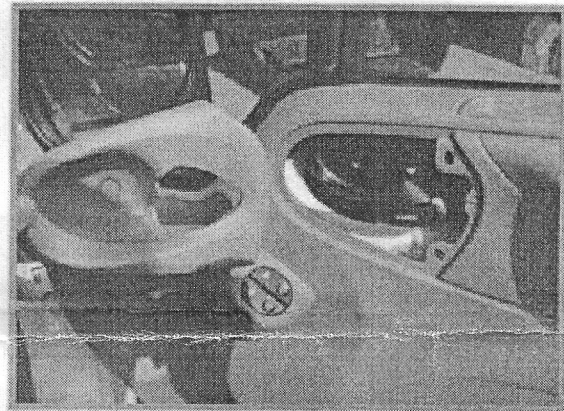

4. Lift the door card carefully from the base

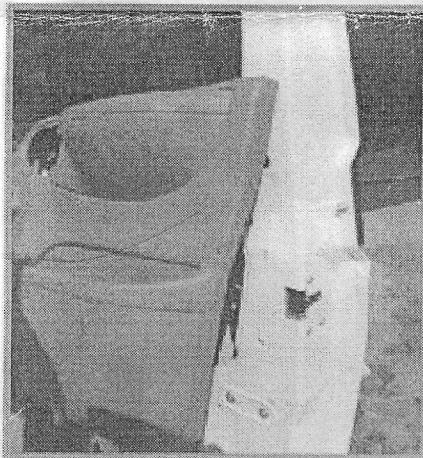

5. Push tab downward on the window switch plug and remove.

