

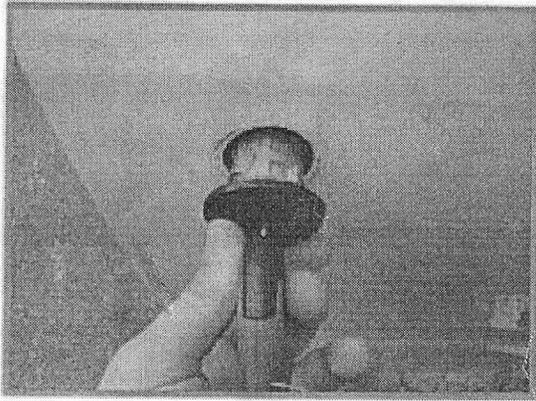


### Installation Guide

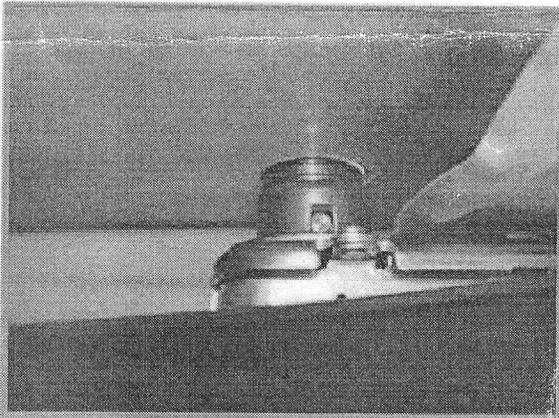

10. Once the pin is pushed in rotate the cylinder anti clockwise and pull it out as in the photos below.

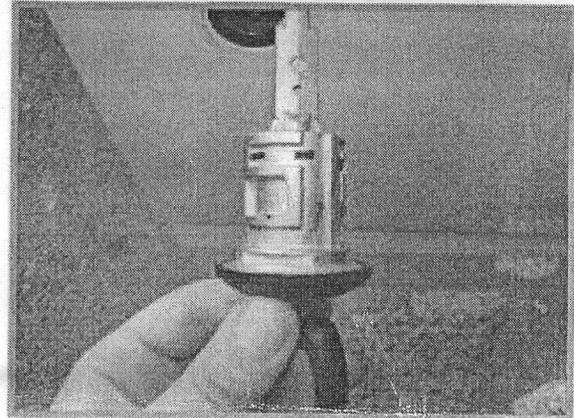

11. Re insert the new cylinder (pushing the side pin in first). Push into mechanism and turn clockwise.

12. Test operation by latching over door lock and using the new key to lock/unlock doors.

13. Put retaining clip back in place & re fix door card. Installation is complete

