

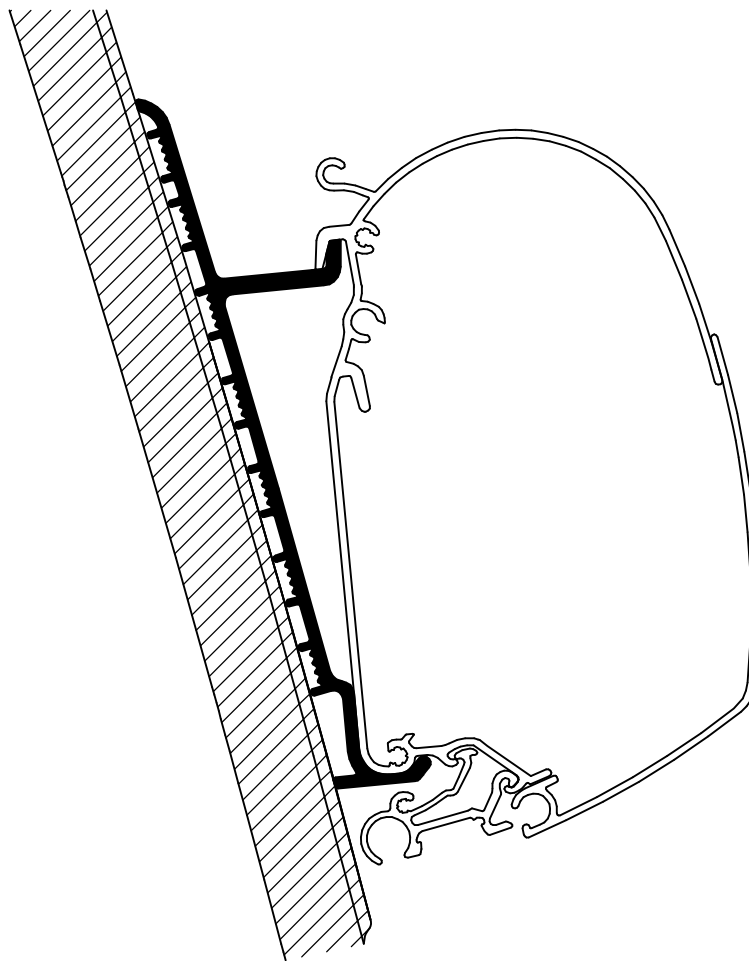
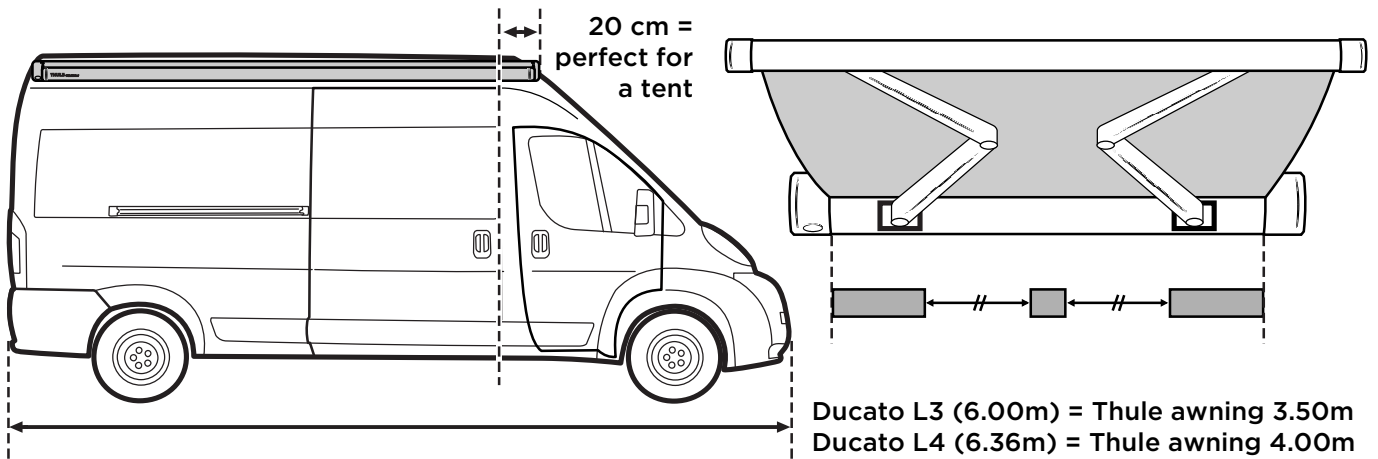


## Ducato H3 Wall adapter V2

# ➤ Instructions

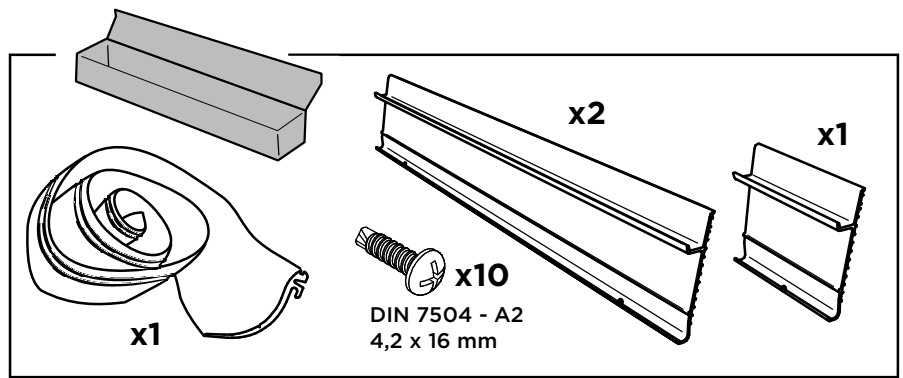

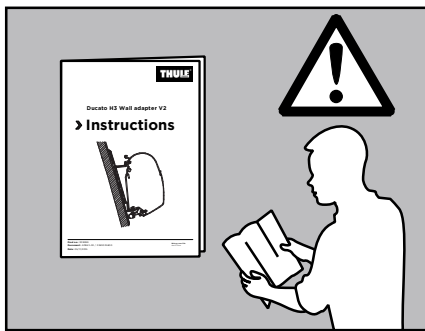

**Glue / Lijmen / Verklebung:**  
Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**  
Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.  
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.  
Preparation and sealing according to the prescripts of the glue supplier.

48 h

