


12 Volt Fuse Box (Body)

The appliances in the living quarters which run off 12 Volt supply are fused through a separate fuse box. This is to be found on the left hand side of the vehicle under the dashboard. To change a fuse, flip up the fusebox cover and read the function, value and colour of the appropriate fuse from the table below.

Fuse No.	Function	Value/Colour
F1	Water pump, shower light	8 Amp/white
F2	Switchbox, cooker hood, kitchen surface light, fan, gas boiler, fridge ignition	8 Amp/white
F3	Through light, cab bed light, seating group light, driver's cab lights	8 Amp/white
F4	Battery charger	16 Amp/red
F5	Fridge	16 Amp/red
F6	Ammeter (appliances)	8 Amp/white
F7	Ammeter/Voltmeter (+ Batt 2, second battery)	8 Amp/white
F8	Voltmeter (+ Batt 1, starter battery)	8 Amp/white

ATTENTION To change a fuse, only use the values from the table above

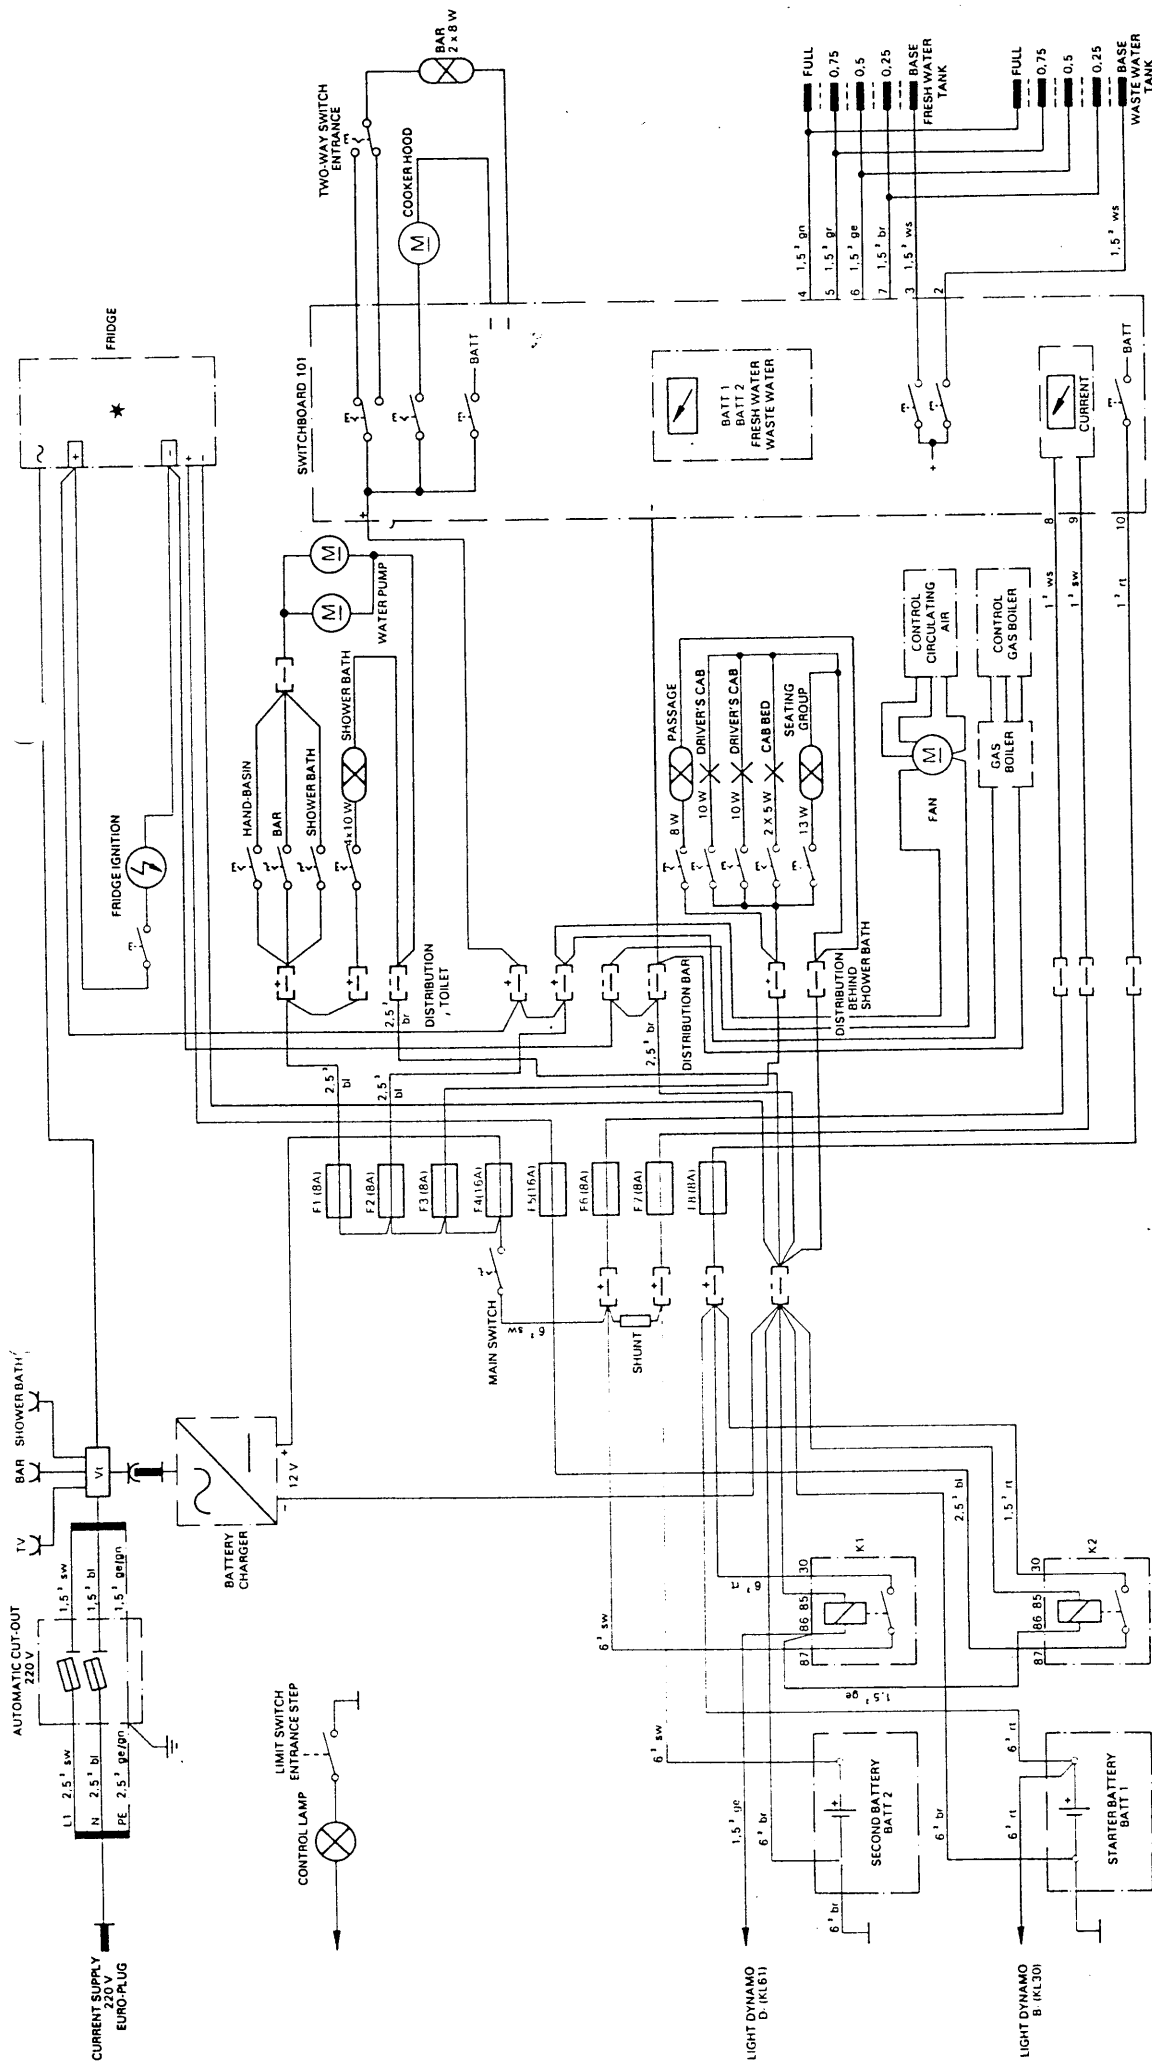

HYMERMOBIL 564

CIRCUIT DIAGRAM